

lacktriangle

Guide to Assembly & Usage

Louvre Panel Stations



Information

If in doubt, contact the supplier



Read this guide thoroughly before commencing assembly and retain for future reference



Before commencing assembly, unpack carefully & check that all components ordered are included



Assembly should be undertaken by two competent people



Tools – Phillips screwdriver, two 13mm spanners



Caution

During assembly, ensure to:



Take care during assembly and in use, particularly when lifting or stretching & when using tools



Wear appropriate safety clothing – protective gloves and footwear are recommended



(

Build on a suitable level floor, which is strong enough to support the load and allow adequate working space



Dispose of packaging materials responsibly



Warning

Rules for the safe use of stations:



Ensure these instructions are retained for reference & that users are aware of the rules for safe use



Never climb on the structure or stand on the station



Do not lean or support ladders, steps, or other objects against station



Always use safety steps to reach high shelves



Do not use in damp or wet conditions



Load heavy items on the lower levels & lighter items on the higher levels



This product is designed for hand loading only



Ensure that the maximum load carrying capacities are not exceeded



Please refer to the loading information supplied for details



Component		Quantity
Cross Brace		6
Upright		2
Small Screw (M4)	£4)	12
Medium Screw (M5)		26
Louvre Panel (per-side)		2

Component		Quantity
Cross Brace		9
Top Upright		2
Bottom Upright		2
Small Screw (M4)	(a)	18
Medium Screw (M5)		38
Bolt (M8)	Emm	4
Louvre Panel (per-side)		3

Component	Quantity
Single Sided Foot Left	1
Single Sided Foot Right	1
Double Sided Foot	2

Choose Appropriately	
Component	Quantity
Swivel Castor	2
Braked Castor	2

If you have any missing components please take note of the part name and code and contact your supplier

Louvre Panel Stations are safe when used responsibly. If in doubt, contact your supplier




Assembly - Louvre Panel Stations

If building a mobile station unscrew all feet and replace with castors. Fitting two braked on one foot and two swivel on the other.

(






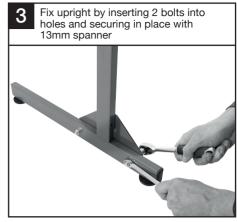








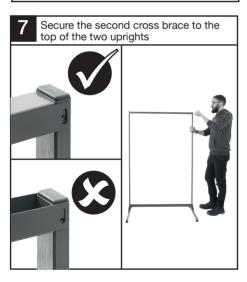

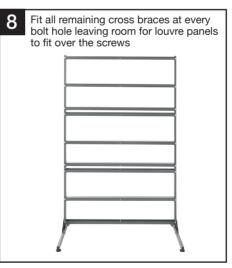




Tip: On single sided stations the front should have the longest foot facing forward

2 Note: Illustrations not to scale


LPS_Louvre_Panel_Stations_Assembly.indd 2

10

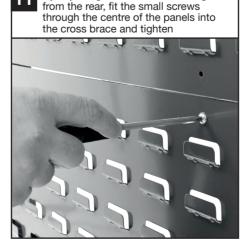

By adjusting the cross braces heights

12 On double sided stations with rear panels repeat steps 9.-11. Finally tighten all remaining screws

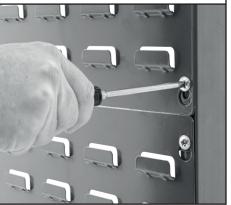

LPS: 3/13